



www.rhinocoffeegear.com

Thank you for purchasing our RHINO BREW SCALE. With normal care and proper treatment, this scale will provide years of reliable service.

General Maintenance and Care

1. Avoid exposure to extreme heat or cold. Also avoid any kind of moisture. Always allow your scale to acclimate to normal room temperature before use.
2. Keep your scale in a clean and dry environment. Dust, dirt, moisture, vibration, air currents and proximity to other electronic equipment may have an adverse effect on the accuracy and reliability of the scale.
3. Handle the scale with care. Gently apply all items to be weighed on the tray top. Although this scale is designed to be quite durable, avoid rough treatment, as this may permanently damage the internal parts. Always avoid shaking and dropping. This is a precision instrument and should be handled with extreme care.

Specification and Function

1. Capacity: 3000g, Accuracy: 0.1g
2. Units: g, oz, lb: oz, ml
3. Key function: ON/OFF, UNIT, TARE, START/STOP (Timer)
4. Display: LCD display with backlight
5. Auto off: default setting is 180 seconds if inactivity; Auto off can be set to 180/300 seconds or disabled manually.
6. Power: 2 x AAA batteries
7. Operation Temp: 10 to 30 deg C
8. Timer: max 99 minutes and 99 seconds

Operation

1. Place the scale on a leveled surface & press "ON/OFF" key to turn on the scale or power it off.
2. Wait until the LCD display shows zero, then press "UNIT" key to choose the weighing unit.
3. Place the item to be weighed on the platform and wait until the reading is stable.

Tare Function

1. Turn on the scale as described above.
2. Place the "tare item" on the platform. Press "TARE" key and wait until the LCD displays zero.
3. Scale can now be used for weighing. Add the "net-weight-item".

Calibration

1. When the scale is turned off, press ON/OFF key to turn on the scale, until zero is displayed.
2. Press and hold the "UNIT" key until the display shows "CAL", then release the button. Press the "UNIT" key again, the required weight flashes on the display. Place the required weight onto the centre of the platform.
3. The LCD display reads "PASS" and come back to the normal weighing mode.

Auto-Off setting

1. The default Auto-Off setting is 180 seconds if inactivity.
2. To change the Auto-Off time setting or disable this function, please follow these steps:
 - ① Turn off the scale.
 - ② With the scale off, press and hold "UNIT" button, then quickly press "ON/OFF" key 8 – 10 times until "180" is displayed. Press "UNIT" key to cycle through your choices of "0/180/300" seconds. Turn off the scale, auto-off setting is completed.
 - ③ Turn on the scale.
 - ⚠ If user chooses "0" seconds in previous step, it means the Auto-Off function is disabled. To keep a longer battery life, please turn the scale off by pressing the "ON/OFF" key after each use.

Timer Function

1. Turn on the scale. Press the START/STOP button to start the timer.
2. Press START/STOP to stop the timer.
3. Press START/STOP button to reset the timer.

Warning

1. "LO": Low voltage. Please replace the batteries.
2. "O-Ld" or "EEEE": Overload. Please remove item quickly to protect the scale.